

## Basic Troubleshooting Tips for Your Tsurumi Electric Portable Pump

Here are some quick checks to perform if your HS or LB series pump is not pumping properly!

1. Check the cable and/or float for any cuts, gouges, or soft spots.
2. Check for any debris clogging in the pump casing by removing (3) 13 mm nuts near the base of the HS series pump or removing 3 bolts from the bottom of an LB series pump.

